

•

# Trinitron<sup>®</sup> Color TV

Operating Instructions





© 1999 by Sony Corporation



# Table of Contents

vveicome:	1
Precautions	1
Using This Manual	1
Connecting and Installing the TV	
Making Connections	2
Cable or Antenna Connections	3
Connecting directly to cable	
or an antenna	3
Cable and antenna	3
Cable Box Connections	4
Cable box	4
Cable box and cable	
VCR Connections	5
Connecting an antenna/cable TV	
system with a VCR	5
Connecting a VCR and TV with a	
cable box	5
DBS Connections	6
Connecting a DBS receiver	6
Connecting a DBS receiver	
and a VCR	6
Additional Connections	7
Connecting a DVD Player	7
Connecting an audio system	
Connecting an A/V receiver	

Connecting two VCRs for editing  Connecting a camcorder  Connecting the IR Blaster (G-Link)	Ç
S-Link Connections1	
Connecting S-Link to a VCR	
Basic Set Up	-
Inserting batteries1	1
Using the remote control move & select buttons1	1
On-screen help/instructions1	]
Using Your New TV	-
Setting up the TV automatically1	2
Setting up the GUIDE Plus+™ Feature 1	
Using the GUIDE Plus+ Feature1	4
Using the GUIDE Plus+ Buttons10	ť
Learning to view a program using	
the GUIDE Plus+ Feature 1	ξ
Learning to schedule viewing and recording using the GUIDE	
Plus+ Feature19	Ç
Watching the TV2	ć
Watching two programs at one	F


Using Your Menus	
Learning menu selection	26
Quick start to the menus	27
Using the VIDEO III menu	28
Using the AUDIO 🎝 menu	29
Using the TIMER 🕘 menu	
Using the SET UP 🛅 menu	31
Using the BASIC 🛅 menu	
Operating Video Equipment	
Programming the remote control	34
Operating a Cable Box or DBS Receiver	
Programming the remote control	36
Troubleshooting	37
Specifications	39
Index4	10

### Remote Control

In the instructions that follow, we will refer to the buttons on your remote control.

Keep this flap unfolded and use this page for reference.



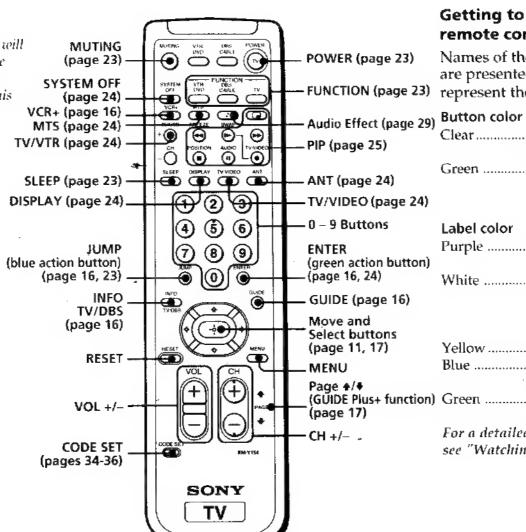

### Getting to know the buttons on the remote control

Names of the buttons on the remote control are presented in different colors to represent the available functions.

Clear	Press to select the component
	you want to control
Green	Buttons relevant to power
	operations, like turning the
	component on or off

		component on or off
	Label color	
	Purple	The GUIDE Plus+ operation
	•	buttons
	White	TV/VTR (VCR)/MDP/DVD
		Player/DBS (Direct Broadcast
		Satellite)/CABLE operation
		buttons
	Yellow	PIP operation buttons
	Blue	DBS (Direct Broadcast Satellite
		operation buttons
ı)	Green	S-Link operation buttons
		•
		the second contract of

For a detailed explanation of most buttons, see "Watching the TV" on page 23.

### WARNING

To reduce the risk of fire or shock hazard, do not expose the TV to rain or moisture.



### CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



### **ATTENTION**

RISQUE DE CHOC ELECTRIQUE, NE PAS OUVRIR

### PRECAUCION

RIESGO DE CHOQUE ELECTRICO NO ABRIR

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,

DO NOT REMOVE COVER (OR BACK).

NO USER-SERVICEABLE PARTS INSIDE.

REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### **CAUTION**

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

### CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same program can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the result of misuse.

### **Note on Caption Vision**

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

### Note on cleaning the TV

Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.

### Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

### **NOTIFICATION**

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving antennas.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This document is for the remote control RM-Y154. MODELS: KV-32V68, 35V68

VCR Plus+, C3, PlusCode and GUIDE Plus+ are trademarks of Gemstar Development Corporation.

The VCR Plus+ and GUIDE Plus+ systems are manufactured under license from Gemstar Development Corporation and VCR Index Systems B.V., respectively.

GEMSTAR IS NOT IN ANY WAY LIABLE FOR THE ACCURACY OF THE PROGRAM SCHEDULE INFORMATION PROVIDED BY THE GUIDE PLUS+ SYSTEM. IN NO EVENT SHALL GEMSTAR BE LIABLE FOR ANY AMOUNTS REPRESENTING LOSS OF PROFITS, LOSS OF BUSINESS, OR INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE PROVISION OR USE OF ANY INFORMATION, EQUIPMENT, OR SERVICES RELATING TO THE GUIDE PLUS+ SYSTEM.

VCR required for recording



### Welcome!

Thank you for purchasing the Sony Trinitron® Color TV. Before reading this manual, check the model number located on the front of this manual or on the rear of your TV.

The menus shown in this manual are for model KV-35V68. Your menus may differ from the ones illustrated.

The features you will enjoy include:

- The GUIDE Plus+ interactive program guide system, which allows you to access program information in an on-screen program guide, sort programs by category, and to quickly schedule programs for viewing or recording. This service is yours with no monthly fee.
- Dual tuner PIP, which allows you to watch two programs at once without having to connect any additional equipment
- SRS, which allows you to listen to stereo programs in dynamic three-dimensional sound
- The FAVORITE CHANNEL feature, which allows you to preview each of your chosen favorite channels in a small window picture before you choose to tune to a particular station
- A front A/V input, for easy connection of your camcorder or game equipment
- An S Video input, for enhanced picture quality



### **Precautions**

### Safety

- Operate the TV only with 120 V AC.
- The plug is designed, for safety purposes, to fit in the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If any liquid or solid object should fall inside the cabinet, unplug the TV immediately and have it checked by qualified personnel before operating it further.
- If you will not be using the TV for several days, disconnect power by pulling the plug itself. Never pull on the cord.

For details concerning safety precautions, see the supplied leaflet "IMPORTANT SAFEGUARDS".

### Note

 After you plug the TV back in, you must wait 24 hours before information will be available in the Program Guide.

### Installing

- To prevent internal heat buildup, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.



# Using This Manual

This manual is divided into five major sections. We recommend that you review the contents of each section in the order presented.

1 Connecting and Installing the TV This section guides you through your initial set up.

### 2 Basic Set Up

This section teaches you the basic skills needed to operate your new TV. It shows you how to operate special functions of the remote control and the GUIDE Plus+ feature.

3 Using your New TV

This section shows you how to use the Easy Set Up Guide feature, and how to use your remote control.

4 Using your Menus

This section teaches you how to access on-screen menus and adjust your TV's settings.

5 Troubleshooting

This section helps you to correct problems you may encounter with your TV.

Instructions in this manual are written for the remote control. Similar controls may be found on the TV console.



# Connecting and Installing the TV

# **Making Connections**

Refer to the table below, it will direct you to the diagram suitable to the components you will be connecting.

if you will be connecting	See page
Cable or antenna only	3
Cable and antenna	3
Cable box	4
Cable box and cable to view scrambled channels	4
VCR and cable or antenna	5
VCR and cable box	5
Direct Broadcast Satellite Receiver (DBS)	. 6
VCR and Direct Broadcast Satellite Receiver (DBS)	6
Digital Versatile Disc player (DVD)	7
Audio system	7
A/V receiver	8
Two VCR's for editing	8
Camcorder to view tapes	9
IR Blaster Cable* (G-Link)	9
S-Link connections	10

### \* IMPORTANT

 You must connect the IR Blaster in order to operate your VCR and/or cable box with the GUIDE Plus+ feature.


### Note


 When using the IR Blaster and a cable box, the cable box must always be left ON to allow GUIDE Plus+ to receive information about upcoming television programs.


### **Cable or Antenna Connections**

# Connecting directly to cable or an antenna

The connection you choose will depend on the cable found in your home. Newer homes will be equipped with standard coaxial cable (see **A**); older homes will probably have 300-ohm twin lead cable (see **B**); still other homes may contain both (see **C**).




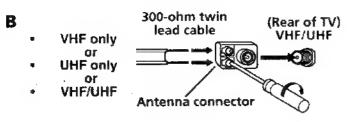

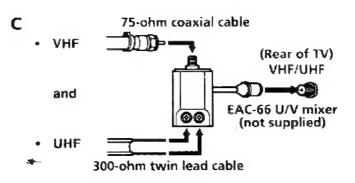

### Cable and antenna

If your cable provider does not feature local channels, you may find this set up convenient for viewing both local and cable channels. Select cable or antenna mode by pressing ANT on the remote control. You will be able to alternate between the two input sources.

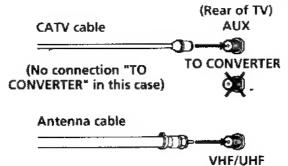

- In order to receive channels with an antenna, you will need to turn your CABLE to OFF (see page 31) and perform the AUTO PROGRAM function.
- The GUIDE feature will not function for items connected to the AUX input.

# Connecting and Installing the TV (continued)

### **Cable Box Connections**

You must connect the IR Blaster in order to operate your cable box with the GUIDE Plus+ feature. (see "Connecting the IR Blaster" on page 9)

Some pay cable TV systems use scrambled or encoded signals that require a cable box to view all channels.

### Cable box


- Connect the coaxial connector from your cable to the IN on your cable box.
- **2** Using a coaxial cable, connect OUT on your cable box\* to VHF/UHF on your TV.

### Cable box and cable


For this set up, you can switch between scrambled channels (through your cable box\*), and normal (CATV) channels by pressing ANT on your remote control.

### Notes

- The GUIDE feature will not function for items connected to the AUX input.
- When using PIP, you cannot view the AUX input (scrambled channels) in the window picture.
- If you are using a cable box with the GUIDE Plus+ feature, when viewing PIP the same picture will be displayed in the main and window picture. (see page 25)
- \* When using the IR Blaster and a cable box, the cable box must be left ON at all times to allow the GUIDE Plus+ feature to receive information about upcoming television programs.

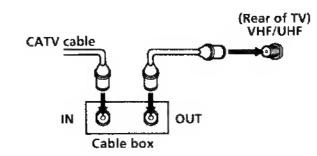

If you are connecting a cable box through the AUX input and would like to switch between the AUX and normal (CATV) input, you should consider using the CHANNEL FIX feature discussed on page 31.

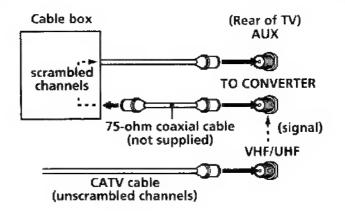

### **VCR Connections**

You must connect the IR Blaster in order to operate your cable box with the GUIDE Plus+ feature.

# Connecting an antenna/cable TV system with a VCR


- 1 Attach your cable or antenna to IN on your VCR.
- 2 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.\*
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on yourTV.
- \* If you are connecting a monaural VCR, connect only the single white audio output to the left input on your TV.

# Connecting a VCR and TV with a cable box

- 1 Attach your cable to IN on your cable box.\*\*
- 2 Using a coaxial connector, connect OUT on your cable box to IN on your VCR.
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.
- 4 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.
- \*\* When using the IR Blaster and a cable box, the cable box must be left ON at all times to allow the GUIDE Plus+ feature to receive information about upcoming television programs.

### Note

 To record programs using VCR Plus+, your VCR must be set to channel 3 or 4, preferably the channel which does not receive a broadcast channel in your area.

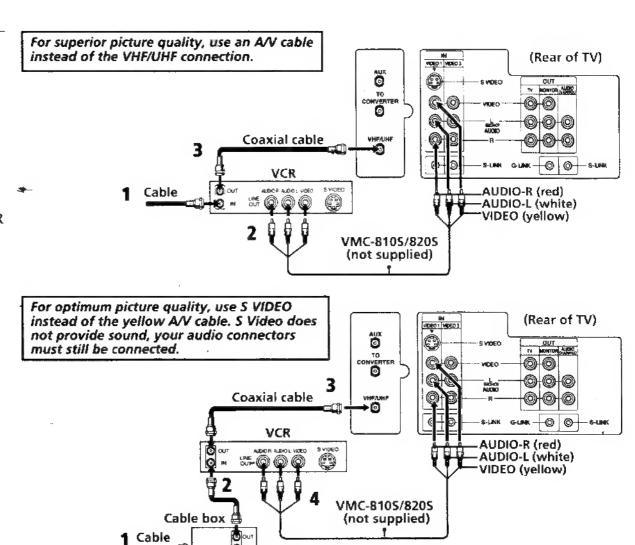



# Connecting and Installing the TV (continued)


### **DBS Connections**


# Connecting a DBS (Direct Broadcast Satellite) receiver

- Connect the cable from your satellite antenna to SATELLITE IN on your DBS receiver.
- 2 Connect your cable or antenna to VHF/UHF on your TV.
- 3 Using A/V connectors, connect AUDIO and VIDEO OUT on your DBS receiver to AUDIO and VIDEO IN on your TV.

### Connecting a DBS (Direct Broadcast Satellite) receiver and a VCR

- Connect the cable from your satellite antenna to SATELLITE IN on your DBS receiver.
- 2 Connect your cable or antenna to VHF/UHF IN on your VCR.
- **3** Using a coaxial connector, connect VHF/UHF OUT on your VCR to VHF/UHF on your TV.
- 4 Using A/V connectors, connect AUDIO and VIDEO OUT on your DBS receiver to AUDIO and VIDEO IN on your VCR.
- 5 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

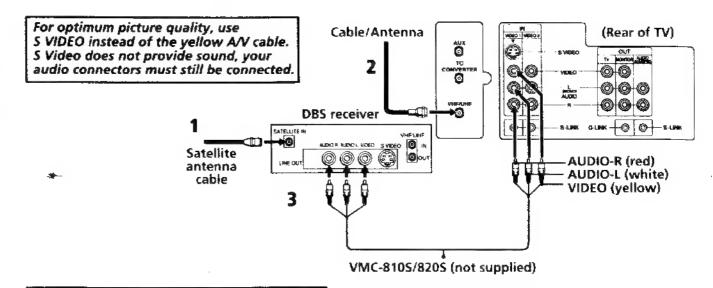

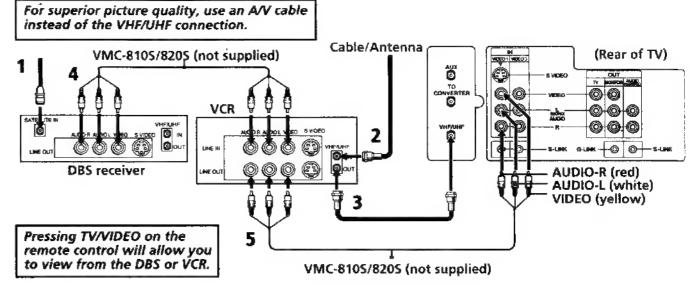

### **Additional Connections**

The following connections are for accessories that will enhance your viewing options.


### **Connecting a DVD Player**


- 1 Using audio connectors, connect AUDIO-R and AUDIO-L OUT from LINE OUT on your DVD to AUDIO-R and AUDIO-L IN from VIDEO IN on your TV.
- 2 Connect S-Video from your DVD player to your TV.

### Connecting an audio system

For enhanced sound, connect your audio system to your TV.

- 1 Using AUDIO connectors, connect AUDIO OUT on your TV to one of the unused line inputs (e.g. TV, AUX, TAPE 2) on your stereo.
- 2 Set your stereo to the chosen line input. Refer to page 29 of this manual for additional audio setup instructions.

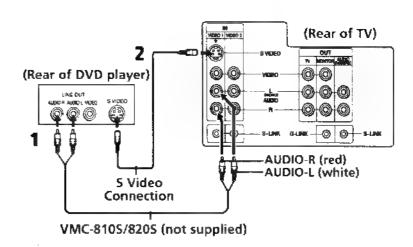

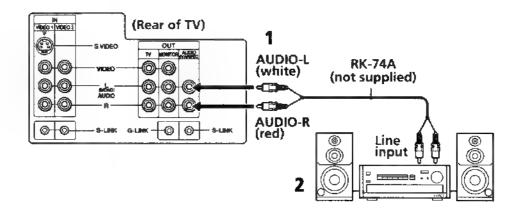



# Connecting and Installing the TV (continued)

### Connecting an A/V receiver

- Using A/V cables, connect TV OUT on your TV to TV IN on your A/V receiver.
- 2 Using a single video connector, connect MONITOR OUT on your A/V receiver to VIDEO 1 IN on your TV.


### Note


 When you are in ■ video mode (VIDEO 1, 2, or 3), you will not be able to access the GUIDE Plus+ feature.

### Connecting two VCRs for editing

MONITOR OUT gives you the ability to use second VCR to record a program being played by the primary VCR or to perform tape editing and dubbing.

- 1 Connect the VCR intended for playback using the setup instructions on page 5 of this manual.
- 2 Using A/V connectors, connect AUDIO and VIDEO IN on your VCR intended for recording to MONITOR AUDIO and VIDEO OUT on your TV.

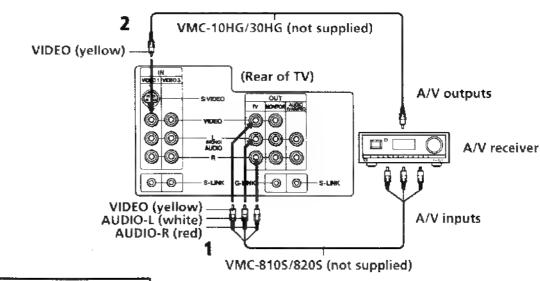

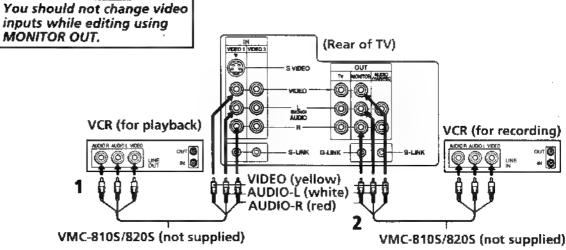

### Connecting a camcorder

This connection is convenient for viewing a picture directly from your camcorder.

Using A/V connectors, connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on your TV.

Connection can also be made directly to your A/V input located on the rear of your TV.


#### Note


 If you are connecting a monaural camcorder, connect only the single white audio output to the left input on your TV.

### Connecting the IR Blaster (G-Link)

You must connect your IR Blaster to automatically control your VCR and/or cable box with the GUIDE Plus+ feature.

- 1 Connect the IR Blaster to the TV's G-Link jack.
- 2 Place the IR Blaster on top of (or below) and overhanging the front of the VCR and/or cable box, about 1/2" to 1". For best results, place the IR Blaster directly above (or below) the VCR's and/or cable box's IR receiving area.
- 3 Set the manufacturer and code type of your VCR/cable box, using the GUIDE PLUS+ SET UP menu (see page 31). This code must be set for the GUIDE Plus+ feature to function properly.

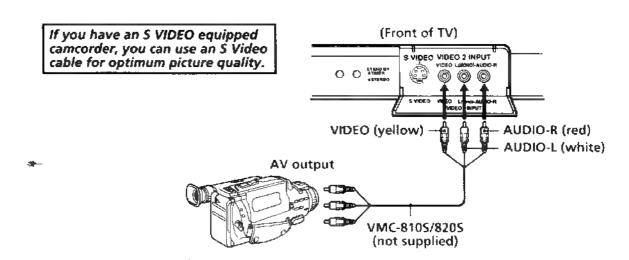

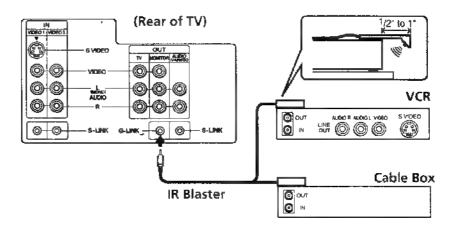

# Connecting and Installing the TV (continued)

### S-Link connections

S-Link is designed to allow your Sony components to "communicate."

### **Connecting S-Link to a VCR**

S-Link will automatically power on the TV and switch to the correct video input when a tape is inserted in the VCR.

- Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.
- Using an S-Link connector (mini plug), connect S-LINK/CONTROL S-IN on your VCR to S-LINK on your TV.


### Connecting S-Link to a DBS

S-Link will automatically power on the TV and switch to the correct video input when you power on the DBS.


- 1 Using A/V connectors, connect AUDIO and VIDEO OUT on your DBS to AUDIO and VIDEO IN on your TV.
- 2 Using an S-Link connector (mini plug), connect S-LINK on your DBS to S-LINK on your TV.

### Note

 Do not connect S-Link to the G-Link jack on your TV.

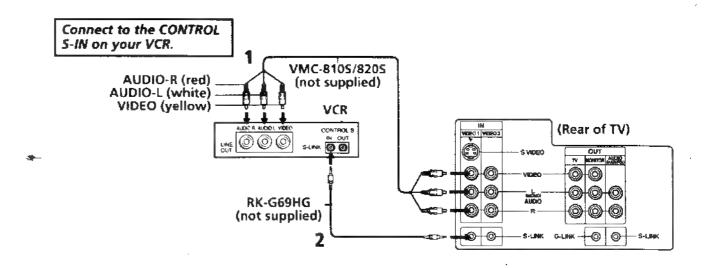

The S-Link connector must be in the same VIDEO-IN jacks as the A/V cables on your TV.

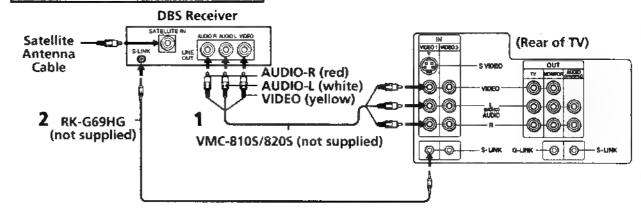


# Basic Set Up

# **Inserting batteries**

Insert two size AA (R6) batteries (supplied) by matching the + and – on the batteries to the diagram inside the battery compartment.






#### Notes

- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater, or where the humidity is high.
- Your remote control can be programmed to operate most video equipment. (see page 34)

# Using the remote control move & select buttons

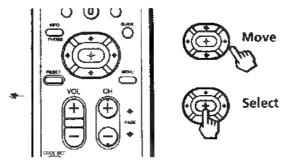

The supplied remote control has "arrow" buttons  $(\blacklozenge, \blacklozenge, \spadesuit, \spadesuit)$  which allow for movement of the on-screen selector. Pressing on the outer buttons will cause the selector to *move* in the corresponding direction. Pressing the center button  $(\textcircled{\clubsuit})$  will *select* the item.

### **Adjustment bars**

When menu items present an adjustment bar ( or or or ), use the arrow buttons to change the setting.

# **On-screen help/instructions**

Several menu windows will provide prompts and instructions to assist you in navigating through the different functions.

When presented, use these to supplement the instructions in this manual.



# **Setting up the TV automatically**

The Easy Setup Guide allows you to set the onscreen language and set all receivable channels in one step.

### Tips 👸


- Perform this function during the day, with the antenna and/or cable properly connected, to ensure that all available channels will be broadcasting and receivable.
- The TV must be set to the TV input to execute AUTO PROGRAM. Press TV/VIDEO until a channel number appears.
- If your cable or antenna is connected to AUX, press ANT until AUX appears next to the channel number.

Using the buttons on the top of the TV:



1 Press POWER to turn on the TV. The Easy Setup Guide screen appears.



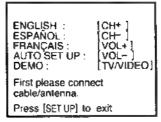

2 Make your language selection by pressing CH +, CH – or VOL +.



**3** Press VOLUME – to continue or TV/VIDEO for a DEMO of functions and menus.

A message will appear, asking if you want to continue to AUTO PROGRAM. Press CH+ to continue.





AUTO PROGRAM appears and the TV starts scanning and presetting channels automatically. If the TV receives cable TV channels, CABLE is set ON automatically.

### To perform AUTO SET UP again


Press the SET UP button on the TV and follow steps 2-3.

- To reset your TV to factory settings, turn the T\
  on. Then, while pressing the RESET button on
  your remote control, press the POWER key on
  your TV. The TV will turn itself off, then back
  on.
- When you perform AUTO PROGRAM, your CHANNEL FIX, CHANNEL BLOCK, and ON/ OFF TIMER settings, as well as your GUIDE Plus+ settings and program information will be erased.

# Setting up the GUIDE Plus+™ feature

After you have set up your TV using the Easy Setup Guide, you will be prompted to set up your GUIDE Plus+ feature.

Several questions will appear on your screen. You will be asked to enter specific information, such as your location, zip or postal code, whether you will be connecting cable, a cable box, or a VCR, etc.

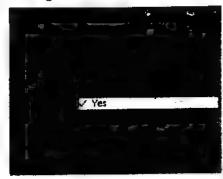

To answer each question, highlight the appropriate answer, and press the → button on the remote control. In some instances, like when you are asked to enter your zip or postal code, you will need to enter numerical information using the ◆/◆ buttons on the remote control.

After you have completed your GUIDE Plus+ set up, you can choose to view a Demo of the GUIDE Plus+ features. If you wish to view this Demo again, after you have exited from GUIDE Plus+ set up, you can re-enter GUIDE Plus+ set up through the TV's SET UP menu. (see GUIDE PLUS+ SET UP on page 31)

If you choose to set AUTO GUIDE to ON, the program guide will appear each time you turn the TV on using your remote control.



WIthin 24 hours of your initial set up of the GUIDE Plus+ feature, you will be able to view program guides on your TV.

If you make a mistake during your set up, or you would like to connect new components to your TV, you can reenter the GUIDE Plus+SET UP menu. (see "GUIDE PLUS+SET UP" on page 31)

- PIP must be OFF to allow the GUIDE Plust feature to receive program information.
- If you have connected a cable box to your TV, the TV must be turned off, and the cable box left on, in order to receive program information.
- If there is more than one cable company in your area, you will be asked to choose a "Channel Map" which matches yours (i.e., Fox =6, NBC = 7, etc).
- The GUIDE Plus+ feature menus are only available in English.
- The GUIDE Plus+ feature may not be available in all areas. If the GUIDE Plus+ feature is not available in your area, please contact the Sony Direct Response Center at the number listed on page 38 of this instruction manual.




# Using Your New TV (continued)

# Using the GUIDE Plus+ Feature

The GUIDE Plus+ feature allows you to see local TV programming, set your VCR to record programs, sort programs by category, set your TV to turn on and tune to a program, and receive information about program content. All this can be done while viewing your current channel in a video window.

Press \infty to view the first screen, the Program Grid.

- When you press MENU, the highlight jumps to the menu bar.
- The GUIDE Plus+ feature will not function when your video source is from video equipment or from the AUX input.
- Press the ANT button to return to the VHF/UHF input before accessing the GUIDE Plus+ feature.

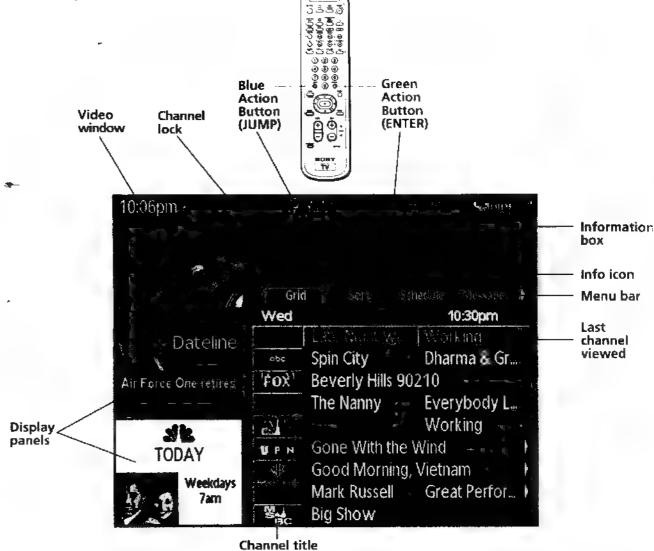

Alema Vecario de la comunicación de	Using the GUIDE Plus+ Feature
Video Window	The video window allows you to view a program while in the Program Grid. Pressing the Dutton while using the GUIDE Plus+ feature will lock/unlock the video window, so the picture will remain the same as you move through the Program Grid.
Channel Lock	This symbol indicates whether Channel Lock is on or off. Pressing the  button while using the GUIDE Plus+ feature will lock/unlock the video window, so the picture will remain the same as you move through the Program Grid.
Blue Action Button	This symbol and corresponding text indicates what will happen when you press the Blue Action Button on your remote control.
Green Action Button	This symbol and corresponding text indicates what will happen when you press the Green Action Button on your remote control.
Information Box	Provides information regarding each program which is highlighted as you scroll through the Program Grid.
info icon 🗓	Icon appears if additional information about a program being described in the Information box is available. When the Info icon appears, press the button on the remote control to access additional information.
Menu Bar	Offers several options for setting up and using the GUIDE Plus+ feature. Menu items include GRID (see page 20), SORT (see page 21), SCHEDULE (see page 21), MESSAGES (see page 22), EDITOR (see page 22), and SETUP (see page 22).
Last Channel Viewed	While in the grid, the last channel viewed will remain highlighted in gray.
	Display panels show information about future programming. After highlighting a display panel, you will be able to access expanded program information 1 for the program advertised, when this information is available.
Display Panels	After you have highlighted a display panel, you can press to schedule the program for viewing, or to schedule the program for recording.
Channel Ads	Sometimes, a channel ad will be displayed within the Program Grid.  After highlighting a channel ad, you will be able to access expanded information I for the program or channel advertised, when this information is available.
	After you have highlighted a display panel, you can press to schedule the program for viewing, or to schedule the program for recording.



# **Using the GUIDE Plus+ Buttons**

The GUIDE Plus+ feature offers on-screen program information. Use the chart and illustration on this page to learn how to access and use the GUIDE Plus+ feature with your remote control.



### Note

 You must connect your IR Blaster in order to operate your VCR and/or cable box. This will allow the GUIDE Plus+ feature to tune to and record programs.



REFER TO THE ILLUSTRATION
OF THE REMOTE CONTROL ON
THE INSIDE FRONT COVER OF
THIS MANUAL AS YOU
REVIEW THIS CHART

Use the Purple Labeled Buttons for the GUIDE Plus+ Feature Operations		
VCR+	Pressing the VCR+ button allows you to program your VCR to record TV programs using the VCR Plus+ code system. You can find the PlusCode programming number codes in your newspaper's Program Guide.  You must have a VCR and an IR Blaster properly connected and set up in order to record programs using the VCR Plus+ feature. Press VCR+ again to exit the VCR Plus+ screen.  Once a program has been scheduled for recording using the VCR Plus+ system, you can review your selection, change the frequency of recording, or cancel the recording within the GUIDE Plus+ SCHEDULE screen. (see "SCHEDULE" on page 21)	
	Pressing the  button while using the GUIDE Plus+ feature will lock/unlock the video window, so the picture will remain the same as you move through the Program Grid.	
OMUL.	Press the  button to choose the left (blue) action button (as displayed at the top of the Program Grid).	
ENTER	Press the button to choose the right (green) action button (as displayed at the top of the Program Grid).	
INFO	Pressing the INFO button will show additional information about a selected program or future programming on the selected channel, if available. An info icon  will appear on the screen to indicate when information is available. You must press the INFO button again to return to basic information.	
GUIDE	Pressing the GUIDE button will activate the GUIDE Plus+ screen.  Pressing again will exit the GUIDE Plus+ screen.	

Use the Pu	Use the Purple Labeled Buttons for the GUIDE Plus+ Feature Operations		
CH +	Press to scroll ♣/♣, a page at a time, while in the GUIDE Plus+ screen.		
MENU	Pressing the MENU button will move you between the grid and the menu bar.		
	Press the arrow keys (♠, ♠, ♠, ♦) to scroll in any direction while using GUIDE Plus+ and press the select button ⊕ to choose the option.		



# Using Your New TV (continued)

# Learning to view a program using the GUIDE Plus+ feature

Use the GUIDE button to access the Program Grid and use the arrow buttons (♠ or ♣) to select a program. Use the following example, in which we select a program to be viewed to learn how to use the GUIDE Plus+ feature.

1 Press the GUIDE button. The Program Grid appears.






2 Press • to highlight the desired program (in this case "Spin City").





3 Press 📀 to select the program.



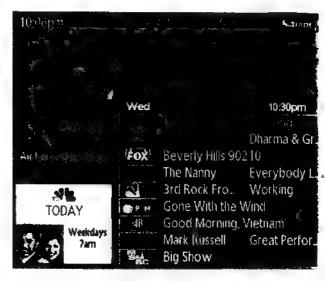

# Learning to schedule viewing and recording using the GUIDE Plus+ feature

Press the GUIDE button.
 The Program Grid appears.



2 Use the ★/\*/\*/\* buttons to move to a future program which you would like to schedule for viewing.



- 3 Press the blue action button (a) to select WATCH.
- 4 Press GUIDE to return to the last channel viewed.

# To automatically schedule future viewing:

Press the blue action button once, and the program will automatically be scheduled for viewing at the time indicated within the Program Grid. The color of the highlight within the Program Grid will change to red to indicate that this program has been scheduled for viewing.

# To enter the Schedule Menu to set up future viewing:

Press the blue action button , then the green action button . Your scheduled viewing option will appear on the screen.

# To change the frequency of your scheduled viewing:

In the Schedule Menu, press the green action button to change your viewing option.

As you press the green action button, you will cycle through the frequency viewing options (once, daily, or weekly).



### Note

 You must connect your IR Blaster in order to operate your VCR and/or cable box. This will allow the GUIDE Plus+ feature to tune and record programs.

### To schedule recording

Follow the directions provided on this page for scheduling viewing. In step 3, press the green action button instead of the blue action button. This will schedule the chosen program for recording. A program scheduled for recording will appear highlighted in orange within the Program Grid.

### Note

 The VCR must be set up correctly during GUIDE Plus+ set up in order for scheduled recording to function properly.

### To cancel viewing or recording

# į.

# Using Your New TV (continued)

### **GRID**

The main viewing screen

The program title of the last channel viewed is highlighted and basic information for the program is displayed in the information box.

Use the 4/4/4 buttons to navigate to different program names, time slots (through midnight of the following day), and channel ads within the grid.

### To record a program:

To record a program, you must first connect the IR Blaster. (see "Connecting the IR Blaster" on page 9)

- 1 Highlight the program title and press the blue action button (a).
- 2 To change your scheduled recording, press the green action button again. Once you enter the schedule screen, you can choose to record the program once, repeatedly (daily, weekly), or to cancel recording.

### To schedule to watch a program:

- 1 Highlight the program title and press the blue action button .
- 2 To change your scheduled viewing, press the green action button . Once you enter the schedule screen, you can choose to watch the program once, repeatedly (daily, weekly), or to cancel scheduled viewing.

To jump to a specific channel within the grid, enter the channel number on the remote control's keypad.

To lock/unlock the video window, press the button. A lock icon will appear in the video window when the picture is locked.

**Unlocked**, the video window will display the current program as you scroll through the channel listings.

**Locked**, the video window will not change as you scroll through the channel listings. If you set the lock while in the grid, the video window will remain locked to the channel you are on. If the lock is already set when you enter the grid, the video window will be locked to the last channel viewed.



#### Notes

ENTER

- You must connect the IR Blaster in order to operate your VCR and/or cable box with the GUIDE Plus+ feature.
- When using the IR Blaster and a cable box, the cable box must be left ON at all times to allow GUIDE Plus+ to receive information about upcoming television programs.
- The TIMER light on the front panel of your TV will not light up when programs are scheduled for viewing using the GUIDE Plus+ feature "WATCH" function.
- If you have connected your TV to a cable box, and are recording using the GUIDE Plus+ feature, you will not be able to change channels during recording.

### SORT

To watch record movies

SORT allows you to organize, select and schedule programs to watch and record.

While in the Program Guide:


- Press MENU.
- 2 Press → to highlight SORT and press →. First level SORT appears on the screen, displaying the last category selected (Movies, Sports or Children's).
- 3 Press 

  to choose a new category, then press 

  .
- 4 Press ♦ to choose a new subcategory, then press .

To schedule a program to be recorded, press the green action button .

If expanded information about a program in the sort screen is available, the 1 will appear in the Information Box. Press INFO to access this information.



### **SCHEDULE**

To adjust program scheduling

SCHEDULE allows you to adjust viewing/recording times of programs.

While in the Program Grid:

Press MENU.


program for recording.


- Press → fd get to SCHEDULE and press .
   A list of programs scheduled to be watched and/or recorded appears on the screen.
- To REMOVE a scheduled program, scroll to it and press the blue action button .

  To CHANGE a scheduled program, scroll to it and press the green action button .

  Programs that have been scheduled for viewing will appear in red within the Program Grid.

  Programs that have been scheduled for recording will appear in orange within the Program Grid.

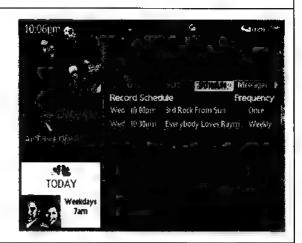

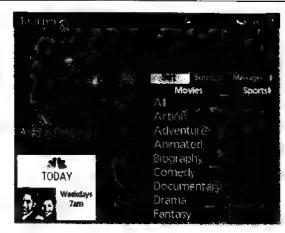



# Using Your New TV (continued)

MESSAGES To view messages	MESSAGES allows you to view system messages.  While in the Program Guide:  1 Press MENU.  2 Press ◆ to get to MESSAGES and press ◆ Messages related to the system will be displayed, If none are available the GUIDE Plus+ ID number will be displayed. If messages remain unread for a prolonged period, they will be automatically deleted.	
EDITOR  To turn channels  ON/OFF in the	EDITOR allows you to adjust channel availability within the grid white using the GUIDE Plus+ feature.  While in the Program Guide:  Press MENU.  Press P to get to EDITOR and press All channels available are listed.  To CANCEL any further changes, press the blue action button All channels available are listed.  To turn a channel ON/OFF, scroll to it and press the green action button All channels.  To reassign a channel number, highlight the channel within the EDITOR screen, and enter the new channel number on the remote control's keypad.  The order of channels within the Program Grid cannot be changed The GUIDE Plus+ EDITOR functions independently of your TV's CHANNEL SKIP/ADD feature.  (see page 31 for information on CHANNEL SKIP/ADD)	Charactel Eqition  ABC OPF FOX ON CBS NEC ON UFIN VB PBS ON VB PBS ON CBC AMC ON
SETUP To use or program the GUIDE Plus+	SETUP allows you to start/change the GUIDE Plus+ feature settings and to view a demonstration of its features.  While in the Program Guide:  Press MENU.  Press + to get to SETUP and press . The setup screen will appear.  To change your settings, select SETUP.  To view the demonstration, select DEMO.	

# **Watching the TV**

The following chart will explain the function of the buttons found on your remote control.



REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART

Using the White Labeled Buttons for TV Operations		
. YTR/ DBS POWER DYO CABLE	Press when you want to turn connected equipment on and off. You can program your remote control to operate other video equipment. (see "Operating Video Equipment" on page 34)	
VTRY DBS/ DVO CABLE TV	Press when you want to control connected equipment with your remote control. (see pages 34-36 for instructions on programming your remote control)	
0-9 and ENTER	Use for direct channel selection. Press 0-9 to select a channel, the channel will change after   ■ seconds, or you can press ENTER for immediate selection.	
CH PRICE +	Press to scan through the channels.  Keeping the CH + or – pressed allows you to rapidly scan to the desired channel.	
JUMP	Press to alternate or jump back and forth between two channels. You can jump between the last two channels selected with the 0-9 keys.  This button can also be used to activate on-screen options while using the GUIDE Plus+ feature.	
MUTING	Press to mute the sound (MUTING will appear on the screen). Press again or press VOL + to restore sound.	
SLEEP	Press repeatedly until the TV displays the approximate time in minutes (30, 60, or 90) that you want the TV to remain on before turning off automatically. Cancel by pressing until SLEEP OFF appears.	

# $I_{i}$

# Using Your New TV (continued)

Using the White Labeled Buttons for TV Operations		
ENTER	Use to activate a channel selected with the 0-9 buttons.  Use to activate on-screen options while using the GUIDE Plus+ feature.	
MTS	Pressing the MTS button will cycle through the MTS options (STEREO, SAP, MONO). (see the MTS section in "Using the AUDIO ♪ menu" on page 29)	
DISPLAY	Press repeatedly to cycle through the available displays:  Status  Channel number, current time, channel caption (if set) are displayed.  CAPTION VISION  Closed captioning will be displayed If the broadcaster offers this service.  (see right)  To cancel the display, press DISPLAY until DISPLAY OFF appears.	
TVAVIDEO	Press repeatedly to cycle through available video inputs:  TV, VIDEO 1, VIDEO 2 and VIDEO 3  When you are in a video mode (VIDEO 1, 2, or 3), you will not be able to access the GUIDE Plus+ feature.	
(AUX input)	Press to change the VHF/UHF input to the AUX input. Press to change from VIDEO input to TV input. For detailed connection information, see "Cable and antenna" or "Cable box and cable" on pages 5-6. The GUIDE Plus+ feature cannot be accessed in AUX mode.	
TV/VTR + O	Press when you are finished using a VCR and you want to switch to the TV input when your remote control is in VCR mode. Your VCR power will remain on.	
SYSTEM OFF	The SYSTEM OFF button allows you to power off all Sony equipment at once.	

### **CAPTION VISION**

(Closed Caption)



CAPTION VISION can be used for programs that are broadcast with closed captioning.

### CC1, 2, 3 or 4

Shows you a printed version of the dialog or sound effects of a program. (The mode should be set to CC1 for most programs)

### TEXT1, 2, 3 or 4

Shows you network/station information presented using either half or the whole screen.

### XDS (Extended Data Service)

Shows a network name, program name, program length, and time of the show if the broadcaster offers this service.

### Note


 Poor reception of TV programs can cause errors in CAPTION VISION and XDS.
 Captions may appear with a white box or other errors instead of intended text.

# Watching two programs at one time - PIP

These models are equipped with dual tuners. This means that PIP is "ready to use".



REFER TO THE ILLUSTRATION
OF THE REMOTE CONTROL ON
THE INSIDE FRONT COVER OF
THIS MANUAL AS YOU
REVIEW THIS CHART

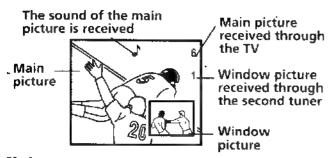

- You must press TV (FUNCTION) before you can control PIP with the yellow labeled buttons.
- The AUX input cannot be viewed in the window picture.
- If you have connected a cable box and activated the GUIDE Plus+ feature, the same picture will appear in both the main picture and window picture.

	Use the Yellow Labeled Buttons for PIP Operations
	Press once to display the window picture (1/9 size).  Press again to reduce the size of the window picture (1/16 size).  Press a third time to remove the window picture.
TV/VIDEO	Press repeatedly to cycle through available video inputs: TV, VIDEO 1, VIDEO 2, VIDEO 3
AUDIO	Press to alternate sound between the main picture and the window picture.  A J will appear for a few seconds to indicate which picture is receiving sound.
TV/VTR + O CH	Press to change the TV channel in the window picture.
POSITION	Press to move the location of the window picture (counterclockwise) around the main picture.
FREEZE	Press to freeze the window picture. Great for copying down phone numbers, addresses, recipes, etc.  Press FREEZE again to restore the picture.
SWAP	Press to switch the audio and video of the main picture and the window picture. Each time you press SWAP, the picture and sound of the two will be swapped.


# Using Your Menus

# Learning menu selection

Use the MENU button to access a menu and use the arrow buttons (♠ or ♣) to alter settings. Use the following example, in which we activate the CABLE, to learn how to modify settings.

 Press the MENU button. The main menu appears.




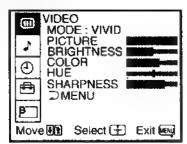

2 Press ♦ or ♦ to highlight the desired menu (in this case SET UP ( ) and press ( ) to select it.





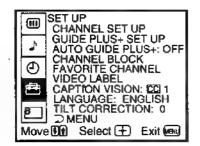


**3** Press ♦ or ♦ to move to the desired option.




4 Press ... Options for your selection will be highlighted.



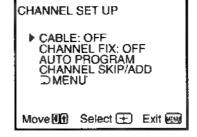

5 Press ★ or ★ to make your selection and press

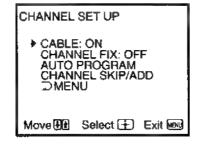

When you are finished making changes to the selected menu, choose  $\supseteq$  MENU to return to th main menu.




#### Note


 Pressing MENU on the remote control will allo you to exit from the menus at any time.

# Quick start to the menus

The following will give you a quick start to the options available for setting up your TV. For detailed information on using the remote control to modify menu settings, refer to "Learning menu selection" on page 25.

### To select a menu:




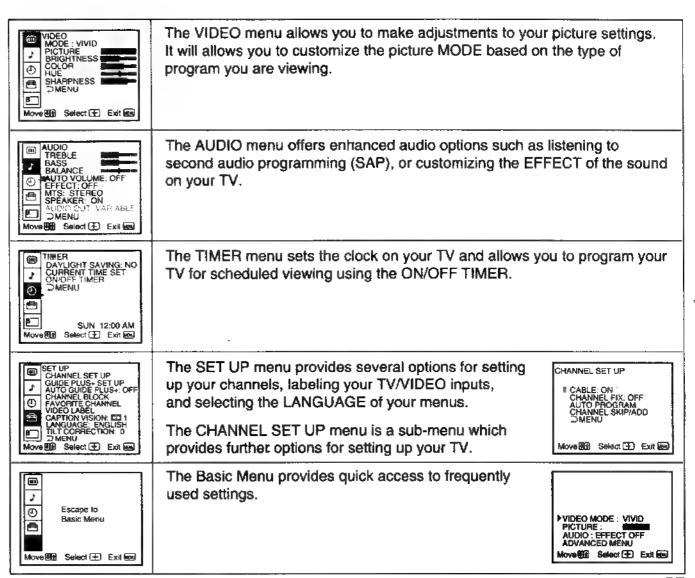




# Using Your Menus (continued)

# Using the VIDEO IIII menu

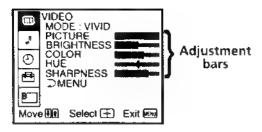

For detailed information on using the remote control to modify menu settings, refer to "Learning menu selection" on page 26.

### To select the VIDEO !!! menu:



# To restore the factory VIDEO settings

Press RESET while the VIDEO menu is displayed.

MODE Customized picture viewing	VIVID: Select for a vivid, bright picture for daytime viewing.  STANDARD: Select to receive a standard picture.  MOVIE: Select for night time movie viewing.
PICTURE Picture contrast	Adjust left to decrease picture contrast and soften the color.  Adjust right to increase picture contrast and create more vivid color.
BRIGHTNESS #icture adjustment	Adjust left to darken the picture. Adjust right to brighten the picture.
COLOR Color saturation	Adjust left to decrease color intensity or saturation. Adjust right to increase color intensity or saturation.
HUE Color tones	Adjust left to increase the red tones. Adjust right to decrease the red tones.
SHARPNESS Picture detail	Adjust left to soften the picture detail.  Adjust right to sharpen the picture detail.


# Using the AUDIO ♪ menu



Adjustment bars

For detailed information on using the remote control to modify menu settings, refer to "Learning menu selection" on page 26.

### To select the AUDIO ♪ menu:



# To restore the factory AUDIO settings


Press RESET while the AUDIO menu is displayed.

TREBLE	Adjust left or right to decrease or increase higher pitched sound.		
BASS	Adjust left or right to decrease or increase low pitched sounds.		
BALANCE	Adjust left or right to emphasize right and left speaker volume.		
AUTO VOLUME Stabilizes volume	ON: Select to stabilize the volume.  OFF: Select to turn AUTO VOLUME off.  Press ② for direct selection of AUTO VOLUME settings.		
EFFECT Enhanced audio options	Press  or  ouldet to select one of these customized effects:  SIMULATED: Adds a stereo-like effect to mono programs.  SRS: Produces  ouldet dynamic three dimensional sound for stereo audio signals.		
MTS Enjoy stereo. bilingual and mono programs	<ul> <li>MTS: Press ♠ or ♠ to select one of the following options:</li> <li>STEREO: Select when viewing a broadcast in stereo.</li> <li>SAP: Select to listen to bilingual broadcast. (Non-SAP programs will be muted when this feature is selected)</li> <li>MONO: Select to reduce noise during stereo broadcasts for areas of weak reception.</li> <li>Quick MTS access: Press MTS on your remote control to cycle through the MTS options.</li> </ul>		
SPEAKER Custom selection of audio output source	<ul> <li>ON: Select to listen to the sound from the TV speakers with or without          separate stereo system.</li> <li>OFF: Select to turn off the TV speakers and listen to the TV's sound only through          external audio system speakers.</li> </ul>		
AUDIO OUT  Use to control the  TV's volume through a stereo	AUDIO OUT can only be set when SPEAKER is set to OFF.  VARIABLE: Sound output varies according to the TV settings.  Useful when you want to use your TV's remote control to adjust the output of a separate audio system.  FIXED: Sound output is held at a fixed level through your stereo.  Use your A/V receiver's remote control to adjust the volume.		




# Using Your Menus (continued)

# Using the TIMER 🕘 menu

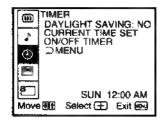

For detailed information on using the remote control to modify menu settings, refer to "Learning menu selection" on page 26.

# To select the TIMER @ menu:



### To cancel the ON/OFF TIMER function

Press RESET while the ON/OFF TIMER menu is displayed.

- The GUIDE Plus+ feature will automatically set your clock. If the DAYLIGHT SAVING and CURRENT TIME SET options are grayed out, this is because the clock has automatically been set.
- Your TV's ON/OFF TIMER will not function when you are watching a program which has been scheduled for viewing using the GUIDE Plus+ feature.


DAYLIGHT SAVING Automatically adjusts the time	Set DAYLIGHT SAVING time before setting the clock.  Spring: Select YES to compensate for Daylight Saving The current time moves one hour ahead.  Fall: Select NO at the end of Daylight Saving Time.  The current time moves back one hour.	Γime.
CURRENT TIME SET Necessary for the ON/OFF TIMER	<ul> <li>With the CURRENT TIME SET menu open:</li> <li>1 Press ⊕.</li> <li>2 Press ♠ or ♠ until the current day is displayed. Press ⊕ to select.</li> <li>3 Press ♠ or ♠ until the current hour and AM/PM is displayed. Press ⊕ to select.</li> <li>4 Press ♠ or ♠ until the current minute is displayed, press ⊕.</li> <li>The clock is set. Press MENU to exit. Any loss of power will cause these settings to be erased</li> </ul>	CURRENT TIME SET AM AM AM MENU  Move III Select
ON/OFF TIMER  Wake up or scheduled viewing	<ul> <li>With the ON/OFF TIMER menu open:</li> <li>1 Press ⊕.</li> <li>2 Press ♠ or ♠ until the desired day or range of days is displayed. Press ⊕ to select.</li> <li>3 Indicate the time that you want the TV to turn on by pressing ♠ or ♠ and then ⊕.</li> <li>4 Set the time duration (maximum of 6 hours) by pressing ♠ or ♠ and then ⊕.</li> <li>5 Press ♠ or ♠ until you reach the desired channel. Press ⊕ to select.</li> <li>The ON/OFF TIMER is now set. Press MENU to exit. When you perform AUTO PROGRAM, all ON/OFF TIME</li> </ul>	ON/OFF TIMER  AM _h CH  DMENU  SUN 12:00 AM  Move The Select Exit (Res)

# Using the SET UP 🛅 menu



For detailed information on using the remote control to modify menu settings, refer to "Learning menu selection" on page 26.

### To select the SET UP 🖶 menu:



### **Notes**

- Your remote control can be programmed to operate your cable box. (see page 36)
- When using the GUIDE Plus+ feature with a cable box, the CHANNEL FIX function will not be available. Your TV is automatically fixed to the appropriate channel using the GUIDE Plus+ feature.
- ON/OFF TIMER and CHANNEL BLOCK settings will be erased when CHANNEL FIX is set.
- If you use the CHANNEL FIX feature, you will not be able to tune to channels through the GUIDE Plus+ Program Guide.


#### CHANNEL With the CHANNEL SET UP menu open: CHANNEL SET UP SET UP Press ♠ or ♦ to access a feature, then press ⇔. ► CABLE: ON CHANNEL FIX: OFF AUTO PROGRAM CHANNEL SKIP/ADD DMENU CABLE: Select ON II your TV is connected to a cable Basic set up options for system. After setting CABLE, you will need to run AUTO **PROGRAM** viewina CHANNEL Fix: Press ♦ or ♦ to set the TV's input to one Move Man Select ( Exit F Exit F I The functions of the following options: within the 2-6: When a cable box is connected to the VHF/UHF CHANNEL SET input. Press DBS/CABLE (FUNCTION) and then CH +/- to change UP menu will not channels through your cable box. be available if you AUX 2-6: When a cable box is connected to AUX and a cable or antenna is use a cable box connected to VHF/UHF. You can alternate between the two inputs by with the GUIDE pressing ANTon the remote control. Plus+ feature. VIDEO 1: When you have connected video equipment (e.g. A/V receiver) and you want the TV input fixed to it. You will be able to alternate between video sources using the AV receiver. OFF: When you want to turn CHANNEL FIX off. AUTO PROGRAM: Instructs the TV to program all receivable channels. CHANNEL SKIP/ADD: With the CHANNEL SKIP/ADD window open: CHANNEL SKIP/ADD Select the desired channel. 33 SKIP 2 Press to SKIP or ADD (only one option will be ▶ ADD available). If you SKIP or ADD a channel, the channel's **DMENU** status within the Program Grid will not change. To Use [0-9] or [CH +/-] add or delete channels in the grid, you must use the to select the channel EDITOR function. (see page 22) Move Ent Select 🛨 Exit 📾 **GUIDE PLUS+** This activates the GUIDE PLUS+ set up screen. (see "SET UP" on page 13) **SET UP** The GUIDE PLUS SET UP menu cannot be accessed when you are in AUX, or VIDEO 1/2/3 mode. ON: The GUIDE Plus+ feature automatically appears when the TV is turned on **AUTO GUIDE** using the remote control. PLUS+ OFF: You must press the GUIDE button to access the GUIDE Plus+ feature.



# Using Your Menus (continued)


CHANNEL BLOCK Prevent child access to certain channels	With the CHANNEL BLOCK window open:  1 Choose 1 or 2 and press	CHANNEL BLOCK  ▶ 1. CH 2. CH  D MENU  Select a position  Move ∰ Select  Exit
FAVORITE CHANNEL Quick access to favorite channels	<ul> <li>Setting FAVORITE CHANNEL:</li> <li>1 Press → and then ↑ or ↑ to select AUTO or MANUAL. (Selecting AUTO will display the last five channels chosen with the remote control's 0-9 buttons.)</li> <li>2 Press ↑ or ↑ to move the cursor to 1, 2, 3, 4 or 5 and press →.</li> <li>3 Press ♠ or ↑ to access the desired channel and press →.</li> <li>To preview your favorite channels in the window picture, set PREVIEW to ON.</li> <li>If you are using a cable box with the GUIDE Plus+ feature, the PREVIEW function will not be available.</li> </ul>	FAVORITE CHANNEL  MODE: AUTO PREVIEW: ON 1. 125 ESPN 2. 14 ABC 3. 48 CBS 4. 16 NBC 5. 5 CBC DMENU  Move (1) Select Exit
	<ul> <li>Using FAVORITE CHANNEL:</li> <li>1 Press ⊕ when in normal viewing mode. Your FAVORITE CHANNEL options will appear.</li> <li>2 Press ♠ or ♦ to access the channel you want to watch, and press ⊕.</li> <li>If PREVIEW is ON, a window picture displays your favorite channels as you cycle through the options.</li> <li>Channels selected through the AUX input will not appear in the FAVORITE CHANNEL menu.</li> </ul>	FAVORITES  P125 ESPN 14 ABC 48 CBS 16 NBC 5 CBC DExit
VIDEO LABEL Label connected equipment for easy recognition	With the VIDEO LABEL window open:  1 Press ♠ or ♦ to access the input mode you want to label and press ⊕.  2 Press ♠ or ♦ to choose the label and press ⊕.  VIDEO LABEL Options:  VIDEO 1: VHS, 8mm, BETA, LD, GAME, DBS, DVD, WEB, RECEIVER, DTV.  VIDEO 2/3: VHS, 8mm, BETA, LD, GAME, DBS, DVD, WEB, RECEIVER, DTV, SKIP.  When VIDEO LABEL is set to WEB, the picture will darken, creating an ideal picture for WebTV viewing. If you select SKIP, your TV will skip this connection when you cycle through video sources using the TV/VIDEO button.	VIDEO LABEL  ▶ VIDEO 1: VHS  VIDEO 2: GAME  VIDEO 3: VIDEO 3  DMENU  Move (197) Salect (1) Exit (197)
LANGUAGE	Select from available languages to display all menus in your language of choice.  GUIDE Plus+ menus are only available in English.	
TILT CORRECTION Adjust your picture	(KV-35V68 only) Use this feature to correct any tilt of the picture.  Press ◆ or ◆ to select a correction between +5 and -5 and press ①.	

# Using the Basic 🖭 Menu

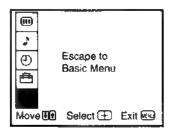

For detailed information on using the remote control to modify menu settings, refer to "Learning menu selection" on page 26.

### To select the Basic 🖭 Menu:



### Note

• The TV automatically displays the last menu used when MENU is pressed.

### **Basic Menu**

Quick access to frequently used settings

With the Basic Menu window open:

- 2 Press (1) to select.

**VIDEO MODE:** Press ♠ or ♦ to set the TV to one of the following settings:

**VIVID:** Select for a vivid, bright picture for daytime viewing.

STANDARD: Select to receive a standard picture.

MOVIE: Select for night time movie viewing. (see page 28)

PICTURE: Press ★ or ★ to adjust the picture contrast. (see page 28)

AUDIO: Press ★ or ★ to set your audio to one of the following settings:

SIMULATED: Adds a stereo-like effect to mono programs.

**SRS**: Produces a dynamic three dimensional sound for stereo audio signals. (see page 29)

ADVANCED MENU: Select when you want to return to the main menus.



# Operating Video Equipment

# **Programming the remote**

You can use the supplied remote control to operate Sony or non-Sony video equipment.

- 1 Press CODE SET.
- **2** Press VTR/DVD (FUNCTION).
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press ENTER.

### **VCR code numbers**

Manufacturer	Cod	e
Sony	301, 302, 303	;
Admiral (M. Ward)	. 327	*
Aiwa	338, 344	۲
Audio Dynamic	314, 337	*
Broksonic	319, 317	•
Canon	309, 308	,
Citizen	332	!
Craig	302, 332	
Criterion	315	•
Curtis Mathes	304, 338, 309	)
Daewoo	341, 312, 309	)
DBX	314, 336, 337	1
Dimensia	304	
Emerson	319, 320, 316, 317, 318, 341	
Fisher	330, 335	)
Funai	338	
General Electric	329, 304, 309	ŀ
Go Video	322, 339, 340	)
Goldstar	332	•

Hitachi Instant Replay		306	304, 305,338
JC Penney		5 304 330	309, 308 , 314, 336, 337
JVC			, 345, 346, 347
Kenwood	٠.		, 336, 332, 337
LXI (Sears)			, 330, 335, 338
Magnavox		,	308, 309, 310
Marantz			314, 336, 337
Marta			332
Memorex			309, 335
Minelta			305, 304
Mitsubishi/MG	A	323	, 324, 325, 326
Multitech			325, 338, 321
NEC			314, 336, 337
Olympic			309, 308
Optimus Panasonic		200	327
Pentax		- 300	, 309, 306, 307 305, 304
Philco			308, 309
Philips			308, 309, 310
Pioneer			308
Quasar		•	308, 309, 306
RCA/PROSCA	AN .	304, 305	308, 309, 311,
			, 313, 310, 329
Realistic	309		, 335, 324, 338
Sansui			314
Samsung			322, 313, 321
Sanyo			330, 335
	2, 313, 32°	1, 335, 323	, 324, 325, 326
Sharp			327, 328
Shintom	0.41.41		315
Signature 200	o (IVI. vvaro	1)	338, 327
SV2000 Sylvania		200	338
Symphonic		300	, 309, 338, 310 338
Tashiro			332
TASHITO			332

Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331

Operating a VCR	Buttons on the remote control
To turn on or off	Press VTR/DVD (POWER).
To select ≡ channel directly	Press the 0 – 9 buttons.
To change channels	Press CH +/
To record	Press ► and •
	simultaneously.
To play	Press ►.
To stop	Press ■.
To fast forward	Press ►►.
To rewind the tape	Press ◀◀.
To pause	Press II.  To resume normal playback press again or press
To scan	Press ►► or ◀◀ during playback. To resume normal playback release the button.
To change input mode	Press TV/VTR.

### Tips 🎖

- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. In this case, please use the equipment's own remote control.
- When you remove the batteries, the code number may revert to the factory setting.
- The code numbers for Sony VCR's are assigned at the factory as follows:

VHS VCR	301
	(preset code for the
	supplied remote control)
8 mm VCR	302
Beta, ED Beta VCRs	303

# MDP (Multi Disc Player) code numbers

Manufacturer	Code
Sony	701
Panasonic	704, 710
Pioneer	702

Operating an MDP	Buttons on the remote control
To turn on or off	Press VTR/DVD (POWER).
To play	Press ►.
To stop	Press ■.
To pause	Press II.  To resume normal playback, press again or press
To scan	Press ►► or ◀◀ during playback. To resume normal playback, press ►.
To search the chapter forward or backward	Press CH +/

### Tip 🖔

If you will not be programming a DBS or cable box into the DBS/CABLE input, you can use it to program other video equipment (e.g. DVD, MDP, or second VCR). (see page 36)

# **DVD (Digital Versatile Disc)** code numbers

Manufacturer	Code
Sony	751
Panasonic	753
Pioneer	752
RCA	755
Toshiba	754

Operating a DVD player	Buttons on the remote control
To turn on or off	Press VTR/DVD (POWER).
To play	Press ►.
To stop	Press ■.
To pause	Press II.  To resume normal playback, press again or press
To scan	Press ►► or ◀◀ during playback. To resume normal playback, press ►.
To search the chapter forward or backward	Press CH +/
To select chapters directly	0-9 + ENTER.
MENU	Press to display DVD menu.
To move cursor in menu	Use your arrow buttons ♠, ♣, ♠, ♠.



# Operating Cable Box or DBS Receiver

# **Programming the remote**

You can program the supplied remote control to operate 

cable box or DBS receiver.

- 1 Press CODE SET.
- **2** Press DBS/CABLE (FUNCTION).
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press ENTER.

# For more details on operating the cable box or DBS receiver

Refer to the operating instructions that were supplied with the equipment.

### If the remote control doesn't work

 First, try repeating the setup procedures using the other codes listed for your equipment.

### Tips 👸

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's supplied remote control.
- Whenever you remove the batteries the code numbers may revert to the factory setting.

### Cable box code numbers

Manufacturer	Code
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I.	201, 202, 203, 204, 205, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

### **DBS** receiver code numbers

Manufacturer	Code
Sony	801 (preset code for remote control)
General Electric	802
Hitachi	805
Hughes	804
Panasonic	803
RCA/PROSCAN	802, 808
Toshiba	806, 807



# Troubleshooting

Consult the table below; it suggests solutions to specific problems.

Problem	What it could be	What you can do
The TV does not turn on and a red light keeps flashing on the TV for more than a few seconds	Your TV may need service.	Call your local Sony service center.
TV makes a noise when turned on	This is a normal function of your TV.	
Screen is not lit and there is no sound	<ul> <li>Power cord may not be plugged in.</li> <li>Batteries may not have been placed with the correct polarity.</li> <li>TV/VIDEO setting may be incorrect.</li> </ul>	Press TV/VIDEO until you receive a channel.
Poor or no picture (screen lit), good sound	<ul> <li>VIDEO menu settings may not be adjusted correctly.</li> <li>Antenna/cable connections may be faulty.</li> <li>VIDEO LABEL inputs may be set to WEB. (This label darkens the screen for ideal WebTV viewing)</li> </ul>	<ul> <li>Readjust your VIDEO menu settings. (see page 28)</li> <li>Check your VIDEO LABEL settings. (see page 32)</li> </ul>
Good picture, no sound	<ul> <li>Sound may be set to MUTING.</li> <li>Your TV may be set to SAP.</li> <li>Speaker may not be set correctly.</li> </ul>	<ul> <li>Press MUTE.</li> <li>Check the MTS setting in the AUDIO menu. (see page 29)</li> <li>Check your SPEAKER settings. (see page 29)</li> </ul>
No color	Color settings may not be adjusted correctly.	Adjust the COLOR settings in the VIDEO menu. (see page 28)
Only snow and noise appear on the screen	<ul> <li>CABLE may not be set correctly in the SET UP menu.</li> <li>Antenna/cable connections may not be correct.</li> <li>TV may be set to AUX mode.</li> </ul>	<ul> <li>Ensure that you have selected the correct CABLE mode in the SET UP menu. (see page 31)</li> <li>Press ANT on your remote control to change the input mode. (see page 24)</li> </ul>
Cannot receive upper channels (UHF) when using an antenna	CABLE setting may not be correct in the SET UP menu.	<ul> <li>Ensure that CABLE is set to OFF in the SET UP menu. (see page 31)</li> <li>Use AUTO PROGRAM to add receivable channels that are not presently in TV memory. (see page 31)</li> </ul>



# Troubleshooting (continued)

Problem	What it could be	What you can do
Cannot receive any channels when using cable	CABLE setting may not be set correctly in the SET UP menu.	<ul> <li>Ensure that CABLE is set to ON in the SET UP menu. (see page 31)</li> <li>Use AUTO PROGRAM to add receivable channels that are not presently in TV memory. (see page 31)</li> </ul>
Cannot gain enough volume when using a cable box	Volume may not be adjusted on your cable box.	Press TV (FUNCTION) and adjust the TV's volume.
TV is fixed to one channel	CHANNEL FIX settings may not be correct.	Check your CHANNEL FIX settings. (see page 31)
Program information is not available in the Program Grid	<ul> <li>Cable box is not turned ON.</li> <li>You have entered the wrong Zip Code during SET UP.</li> <li>IR Blaster is positioned incorrectly.</li> <li>Your reception could be poor.</li> <li>PIP must be turned off to allow the GUIDE Plus+ to download program information when the TV is turned on. (see "Setting up the GUIDE Plus+ Feature" on page 13)</li> </ul>	<ul> <li>Cable box must be left on at all times.</li> <li>Position the IR Blaster directly in front of your Cable box's IR receiving area.</li> <li>If you have connected a cable box to your TV, you must turn off the TV using the TV's remote control. Do not power the TV off using the cable box switch.</li> </ul>
Channel numbers within the GUIDE do not correspond to the appropriate channel logos.	GUIDE Plus+ feature is set incorrectly.	Perform GUIDE Plus+ SET UP again, ensuring that the appropriate Zip or Postal Code, Cable Setting, and Channel Map are chosen. (see page 13)
Programs scheduled for recording are not recorded.	<ul> <li>IR Blaster is positioned incorrectly.</li> <li>Your VCR was setup incorrectly.</li> <li>When VCR and cable box are used together, the VCR must be set to channels 3 or 4, whichever the cable box is set to</li> </ul>	<ul> <li>Position the IR Blaster directly in front of your Cable box's IR receiving area.</li> <li>Reenter the GUIDE Plus+ SET UP screen and enter correct VCR information. (see page 31)</li> <li>When the recording process begins, the VCR must be turned off.</li> </ul>

If, after reading these operating instructions, you have additional questions related to the use of your Sony television, please call our Direct Response Center at 1-800-222-SONY (7669) (U.S. residents only) or (416) 499-SONY (7669) (customers in Canada only)



# **Specifications**

# **Supplied accessories**

Remote control RM-Y154 (1) Batteries size AA (R6) (2) IR Blaster (1)

# **Optional accessories**

Connecting cables VMC-810S/820S, RK-74A, RK-G69HG, VMC-10HG/30HG TV Stand SU-32A4, SU-35A4 U/V mixer EAC-66

Design and specifications are subject to change without notice.

### (●)® SRS (SOUND RETRIEVAL SYSTEM)

The (●) SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.

Licensed by BBE Sound, Inc. under USP 4638258.4482866. BBE and BBE symbol are trademarks of BBE Sound, Inc.

	KV – 32V68	KV – 35V68
Power requirements	120 V, 60 Hz	120 V, 60 Hz
Number of inputs/outputs		
Video 1)	3	3
S VIDEO <sup>2)</sup>	2	2
Audio 3)	3	3
Audio out <sup>4)</sup>	1 ,	1
Monitor out 1)	1	1
*TV out 1) 3)	1	1
S-Link	3	3
G-Link (IR Blaster)	1	1
Speaker output (W)	10W×2	10W×2
Power consumption (W) In use (Max.) In standby	200 W 8 W	230 W 8 W
Dimensions (W/H/D)		
(mm) (in.)	$821 \times 675.3 \times 587$ mm $32^{3}/8 \times 26^{5}/8 \times 23^{1}/2$ in	920 × 730.8 × 641.8 mm 36 <sup>1</sup> / <sub>4</sub> × 28 <sup>3</sup> / <sub>4</sub> × 25 <sup>1</sup> / <sub>4</sub> in
Mass (kg) (lbs)	70 kg 154 lbs	93 kg 205 lbs

MALE SOLICO

#### **Notes**

- 1) 1 Vp-p, 75 ohms unbalanced, sync negative.
- Y: 1 Vp-p, 75 ohms unbalanced, sync negative C: 0.286 Vp-p (Burst signal), 75 ohms
- 3) 500 mVrms Impedance: 47 kilohms
- More than 408 mVrms at the maximum volume setting (variable)

More than 408 mVrms (fix) Impedance: 50 kilohms

### **Television system**

American TV standard, NTSC

### Channel coverage

VHF: 2-13/UHF: 14-69/CATV: 1-125

MAL DELICO

### Picture tube

Trinitron® tube

### Visible screen size

32-inch picture measured diagonally (KV-32V68 only) 35-inch picture measured diagonally (KV-35V68 only)

### Actual screen size

34-inch picture measured diagonally (KV-32V68 only) 37-inch picture measured diagonally (KV-35V68 only)

### Antenna

75 ohm external terminal for VHF/UHF



A
Adjusting your menus
ANT
Antenna cable 3
Antenna connector 3
AUDIO D button
AUDIO menu operations J
AUDIO OUT29
AUTO VOLUME
BALANCE
BASS29
EFFECT
MTS29
SPEAKER 29
TREBLE 29
AUDIO OUT
FIXED 29
- VARIABLE
AUTO PROGRAM31
AUX Hookup
A/V receiver8
В
BALANCE
Basic Menu 🖭
BASS
Battery installation
BRIGHTNESS 28
C
CABLE
Cable box4
operation
CAPTION VISION (closed caption)24
CATV cable3

Coaxial cable	
'H +/	
HANNEL SKIP/ADD	3
HANNEL BLOCK	3
CHANNEL CAPTION	3
CHANNEL FIX	3
COLOR	2
Connecting TV to	_
Antenna	_
Audio system	
A/V receiver	
Cable	
Cable box and cable	
Camcorder	
DBS receiver	
DBS receiver and VCR	
DVD player	
S-Link	1
Two VCRs	
VCR	
CURRENT TIME SET	
PAYLIGHT SAVING	2
OBS receiver operation	
DISPLAY	•
CAPTION VISION	2
Status	
XDS	
OVD operation	
· · · · · · · · · · · · · · · · · · ·	٠,
	_
asy Setup Guide	1
diting using MONITOR OUT	_ ;

EFFECT	
SIMULATED	29
SRS	29
F	
Factory settings	30
FAVORITE CHANNEL 3	27
FAVORITE CHANNEL w/preview	
FREEZE button	
	دع
G	
G-Link Connections	
Grid 2	20
GUIDE Plus+	
EDITOR2	22
GRID	
MESSAGES 2	22
SCHEDULE2	
SETUP2	
SORT	
н	
HUE	30
	20
l, J, K	
IR Blaster	
JUMP button 2	23
L	
Language selection	32
Learning menus	
AUDĬO 2	29
Basic Menu	
SET UP	
TIMER	
VIDEO	

M, N	
MDP operation	15
Menu selection 2	26
MESSAGES 2	2
Mode	
MOVIE 2	28
STANDARD2	8
VIVID 2	8.
MONITOR OUT	8
Mono 2	9
MTS	
MONO 2	9
SAP 2	9
STEREO	9
MUTING button 2	23
0	
On-Screen Help	1
ON/OFF TIMER	
Operating video equipment3	34
P, Q	
Picture-in-Picture (PIP)	
Main picture 2	25
Window picture2	
PIP operations	
AUDIO	25
CH+/	
FREEZE	
PIP	
POSITION2	
SWAP	
TV/VIDEO	
Programming the remote	

R
Remote control
FUNCTION buttons23
Illustration inside front cover
S
SAP
Safety 1
SCHEDULE
Scrambled channels
Select buttons
Adjustment bars11
SETUP 22
SET UP menu 🖶31
AUTO PROGRAM31
CABLE 31
CHANNEL SKIP/ADD31
CHANNEL CAPTION 31
CHANNEL BLOCK32
FAVORITE CHANNEL32
LANGUAGE 32
VIDEO LABEL 32
Setting up TV 12
SHARPNESS28
SLEEP button23
S-Link Connections 10
SORT 21
SPEAKER
ON 29
OFF
Specifications
Splitter 5
SWAP button
SYSTEM OFF button23

T, U
TIMER menu operations ①
CURRENT TIME SET
DAYLIGHT SAVING30
ON/OFF TIMER 30
TREBLE 29
Troubleshooting
TV (FUNCTION) button
TV POWER button 23
TV/VIDEO button
TV OUT
V, W, X, Y, Z
VCR
VCR manufacturer code numbers
VCR operation
VCR Plus+
VIDEO LABEL
VIDEO menu operations III
BRIGHTNESS28
COLOR
HUE 28
MODE
PICTURE 28
SHARPNESS28
VOL +/ 12
VTR
WATCH 19
XDS